

J&S Technical Information

Bearing Race And Seal Driver – L1260



Instructions for use


Select the appropriate sized driver and fasten to the driver handle using the bolt supplied.

Place bearing onto tapered face of driver

Use a hammer to knock the bearing into place.

The driver can be turned around and the flat face used to drive oil or grease seals.

Three larger driver sizes are available as optional extras.

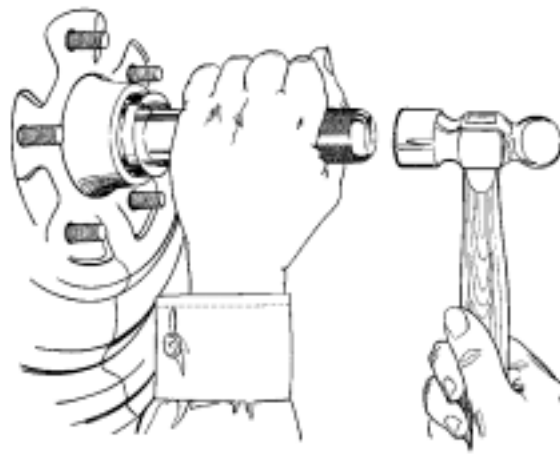

Drivers	Size	
L1261	1.565"	} Included in set
L1262	1.750"	
L1263	1.965"	
L1264	2.325"	
L1271	2.470"	
L1265	2.555"	
L1269	2.830"	
L1270	2.995"	
L1297	3.180"	

