

# J&S Technical Information

## CV Boot Banding Tool – L3095


### Steel Band – Z011336

### Clips – Z011337



#### Instructions for use

- Push end of banding through the rectangular hole in a clip, and fold it back on itself to make a loop. Squeeze the loop up tight with pliers.
- Cut off enough banding to go around the CV Boot (some people like to go round twice) with spare to go up through the tool L3095.

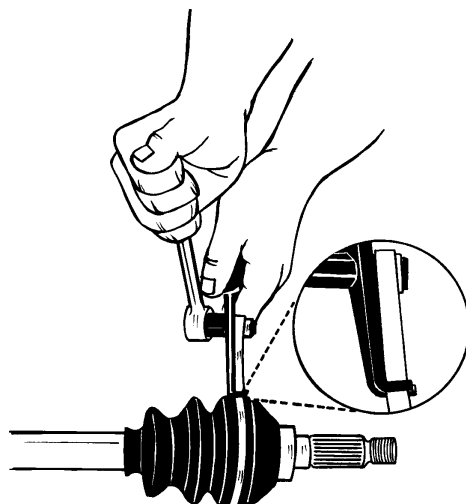

- Wrap the banding around the CV Boot and then back through the clip again.
- Place the tool L3095 so that the band goes through the nose piece and up the handle through the slotted tensioning wheel.
- Use a ratchet and socket to tighten the banding, then rotate the tool over the boot, bending the band back onto the clip.
- Unwind the tensioner to release the tool, and cut off the banding to about 1" long.
- Complete the clamping by tapping down the spare end of the banding.

